HOONIGAN





HIO SGALE 4WD ON ROAD READY-TO-RUN









Official Licensed Product

:: Introduction

Thank you for purchasing this Team Associated product. This assembly manual contains instructions and tips for building and maintaining your new RTR. Please take a moment to read through this manual to help familiarize yourself with these steps. We are continually changing and improving our designs; therefore, actual parts may appear slightly different than in the illustrations. New parts will be noted on supplementary sheets.

:: Vehicle Features

- A-arm front and rear independent suspension
- · Steel dog bones and drive axles
- · Threaded shock bodies
- Oil filled shocks
- Sealed front and rear gear differentials
- Steel ring and pinion gears
- Adjustable hook and loop battery straps
- Full metal ball bearings
- 550 sized brushed motor
- Programmable ESC [with aftermarket program card]
- Injection molded brake calipers and rotors
- · Sealed center driveline
- · Aluminum motor plate
- · Adjustable shock mounting locations
- Bolt on steering plates
- Bleeder screws included on shock caps
- Molded one -piece tie rods and steering links
- Sealed receiver box
- · Adjustable body post height locations
- Steel 25T servo horn
- Active rear toe suspension design
- G10 shock towers
- G10 main chassis
- 'Shorty' battery box
- POM filled injection molded pivot balls

:: Additional

Your new RTR comes factory assembled including radio gear, motor, and ESC.

However, there are some items you will need to complete your kit (refer to website for suggestions):

• AA-size batteries for transmitter (#302 x4)

- Peak Detection Charger or LiPo Compatible Charger
- 2/3S LiPo battery pack w/High Current T Plug (shorty packs only).

:: Other Helpful Items

- Silicone Shock Fluid (Refer to website for complete listings)
- Green Slime shock lube (AE # 1105)
- Thread Locking Compound (AE # 1596)
- 7 Piece Hex Driver Set (AE # 1650)
- Calipers or a Precision Ruler

- Silicone Diff Fluid (Refer to website for complete listings)
- Cyanoacrylate glue (AE # 1597)
- Body Scissors (AE # 1737)
- FT Nut Drivers (AE #1519)
- Reamer / Hole Punch

- Hobby KnifeWire Cutters
- Soldering Iron
- Soldering non
- Needle Nose Pliers

Associated Electrics, Inc. 21062 Bake Parkway. Lake Forest, CA 92630



Customer Service Tel: 949.544.7500 Fax: 949.544.7501

| : Hardware - 1:1 Sca | le View | | |
|---------------------------------|---------------------|---------------------------------------|-------------------------------------|
| Flat Head Screws (fhcs) | | Socket Head Screws (shcs) | Shims and Washers |
| 2.5x1 | 0 mm (31350) | 2x5mm (31511) | 3x7mmx1mm (42260) |
| 2.5xI | 4mm (41077) | 2x8mm (7187) | |
| 3x | 6mm (31541) | 2.5x6mm (41079) | 3x7mmx2mm (42260) |
| 3x | 8mm (25201) | 2.5x10mm (41087) | |
| 3xI | 0 mm (25202) | 2.5x14 mm (71032) | 3x7x3mm (42260) |
| 3xI | 2 mm (25203) | 2.5 x16mm (41086) | 3x7x5mm (42260) |
| 3x1 | 4mm (89208) | | 3x7x7mm (42260) |
| Button Head Screws (bh | ics) | | 3X/X/IIIII (42260) |
| | 3mm (31509) | Set Screws | |
| 3x | 4mm (91158) | | |
| 3x | 5mm (31530) | 3x3mm (25225) 3x16mm (4689) | Mice Corours |
| 3x | 6mm (31531) | | Д |
| 3x | 8mm (31532) | 4x16mm (4677) | Shoulder Screw 3x4x10/lilli (42070) |
| 3xI | 0mm (25211) | Pivot Balls | 4x12mm Screw Pin (42022) |
| 3xI | 2mm (89202) | Pivot Ball, Short (42041) | Pin 2x11mm (42019) |
| 3xI | 4mm (25187) | Pivot Ball, Long, Upper Shock (42041) | |
| 3xI | 6mm (89203) | | |
| 3x | 18mm (2308) | Locknuts | |
| 3x2 | 0mm (25188) | _ | |
| 3x2 | 2mm (25189) | M3 Locknuts (25215) Aluminum (31550) | |
| 3x2 | 4mm (89204) | | |
| 3x2 | 6mm (89205) | M4 Locknut W/Flange (25391) | |
| 3x2 | 8mm (41078) | | |
| | | Bearings | |
| | | 4x8x3mm (91568) | |
| LP Socket Head Screws (lp shcs) | | 5x10x4mm (91560) | |
| 3x | 6mm (41089) | | |
| 3x1 | 0 mm (41090) | 7x14x3.5mm (91474) | |
| 3x1 | 6mm (41093) | | |
| 3x2 | .0mm (41091) | 10x15x4mm (91563) | |

:: Table of Contents

1..... Cover

2.....Introduction

3.....1:1 Hardware "Fold Out"

4.....Table of Contents

5 - 7.....Quick Start Guide

8.....Shock Build

9.....Gear Differential Build

9 - 12.....Front / Rear Suspension Build

12 - 13......Chasssis Build

14 - 16......Electronics Build

16 - 19.....Tires and Body Build

20 - 21.....Hoonigan

22.....Back Cover

:: Notes



This symbol indicates a special note or instruction in the manual.



This symbol indicates a Racers Tip.



There is a 1:1 hardware foldout page in the front of the manual. To check the size of a part, line up your hardare with the correct drawing until you find the exact size. Each part in the foldout has a number assigned to it for ordering replacement parts.

Associated Electrics, Inc. 21062 Bake Parkway. Lake Forest, CA 92630



Customer Service Tel: 949.544.7500 Fax: 949.544.7501

:: Quick Start Guide

Battery Charging Steps and Safety:

Remove the battery from the vehicle before charging. Place battery on a fire resistant surface. Avoid any contact with water or other liquids. Be sure to select the correct charging mode for the type of battery you are charging.

ALWAYS use a compatible charger for charging your batteries.

Caution: Never leave the battery unattended while charging. Always disconnect the charger from the power source when finished charging.

Caution: Always disconnect the battery when you are finished driving the vehicle.




Peak Detection Quick Charger

:: Quick Start Guide - (cont.)


Battery Installation:

- Install the battery with the battery wires directed towards the front of the vehicle.
- Secure the hook and loop strap near the rear shock tower.
- 3. Secure the hook and loop strap near the front shock tower.

You may move the foam pad to either the front or the rear of the battery compartment to adjust the weight balance of the vehicle.

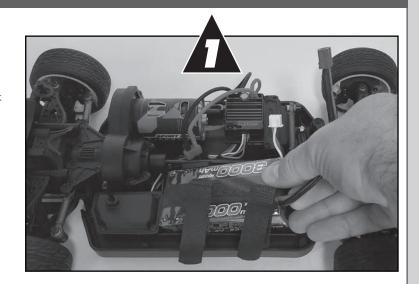

:: Quick Start Guide - (cont.)

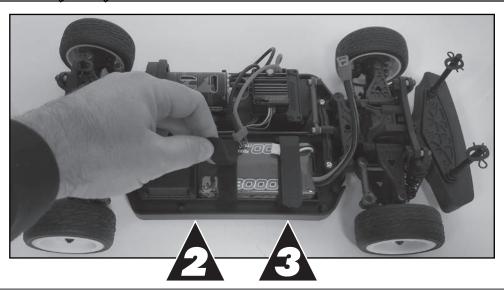

:: Quick Start Guide - (cont.)

Battery Notes and Tip:


Connect the battery as shown.

Disconnect the battery when not in use!

LiPo: LiPo batteries (lithium polymer) are high current rechargeable batteries. LiPo batteries offer extended run time and peak performance over NiMH batteries. They require a peak detection charger designed specifically for LiPo batteries. These batteries require special care and handling. LiPo batteries are recommended for advanced users only!

ALWAYS charge a LiPo battery in LiPo mode.

If using a 3S LiPo battery, use a smaller pinion gear as a starting point (use part #1335 17T Pinion). This provides the correct gear ratio required for the more powerful 3S LiPo battery. Gearing will depend on the surface you are running on, and the size of the track/area that you are driving in.

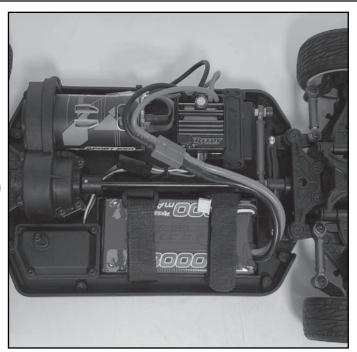

:: Quick Start Guide - (cont.)

Radio System Tuning and Controls:

RULE: Transmitter on First/Vehicle on Second, Vehicle off First/Transmitter off Last!

- 1) Slide the battery cover to remove cover.
- 2) Install alkaline or rechargeable AA size batteries into the battery holder.
- 3) Slide the battery cover back into place making sure it is completely closed and secure.
- 4) Turn the power ON. If the power indicator LED fails to light, check the batteries for insufficient contact or incorrect polarity.





:: Quick Start Guide - (cont.)

Radio System Tuning and Controls:

DO NOT hold the trigger when turning on the radio.


If using optional battery for transmitter, be sure to plug it in correctly. Plugging in a battery backwards can cause damage.

Refer to Radio owners manual for more in-depth instructions on radio operation and functions.



Throttle set to Neutral!


Adjust steering trim so front wheels point straight.

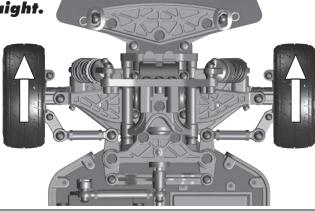

TRIM


D/R


:: Quick Start Guide - (cont.)

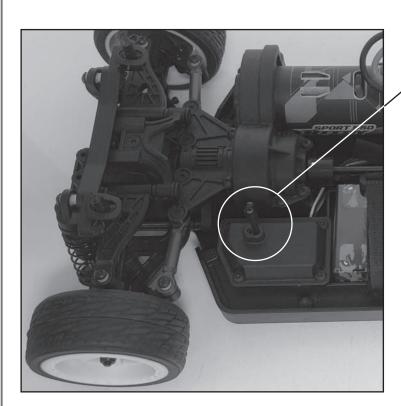



Install antenna wire through antenna tube, then install antenna tube as shown.


Install body and body clips. Ready to go!

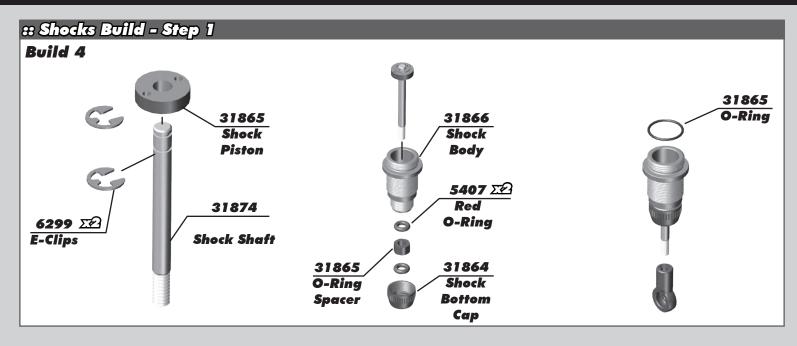


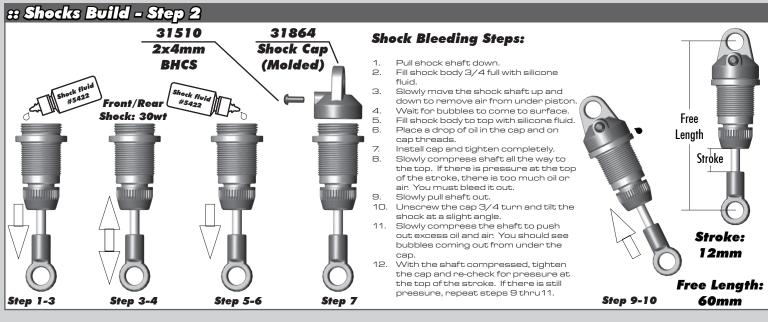


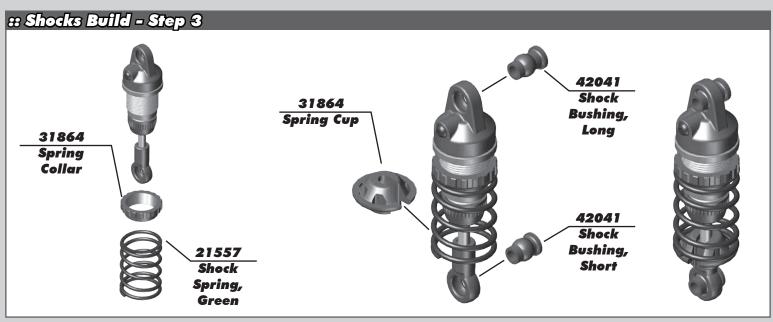


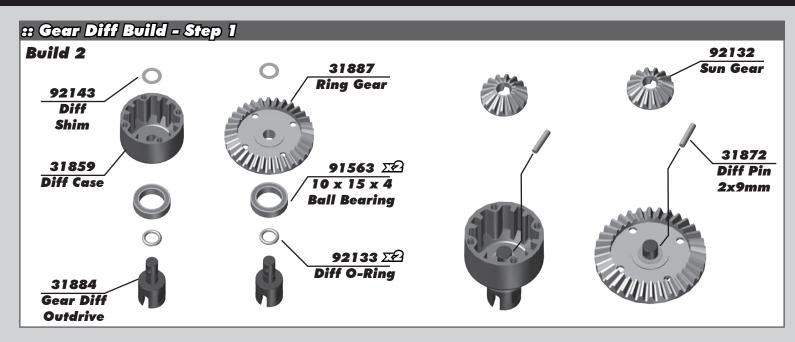


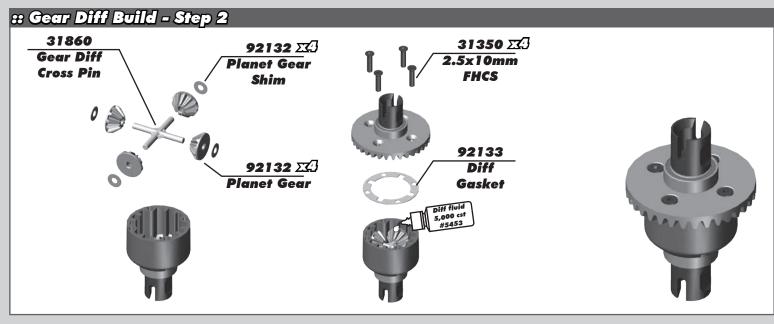


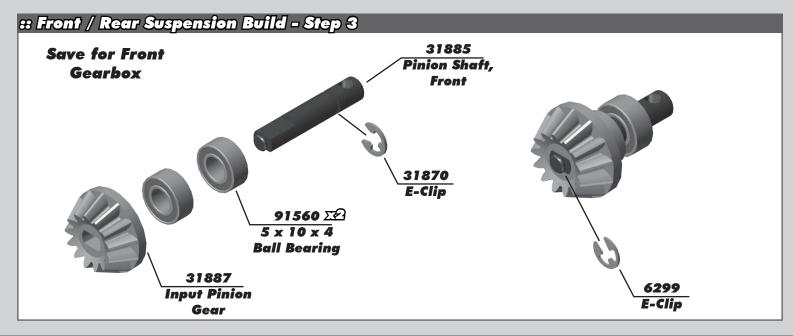


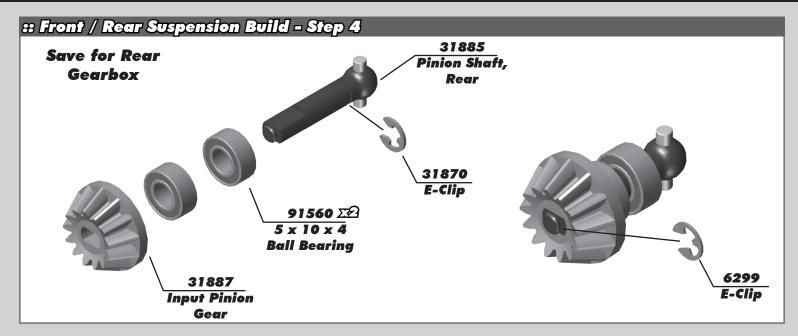


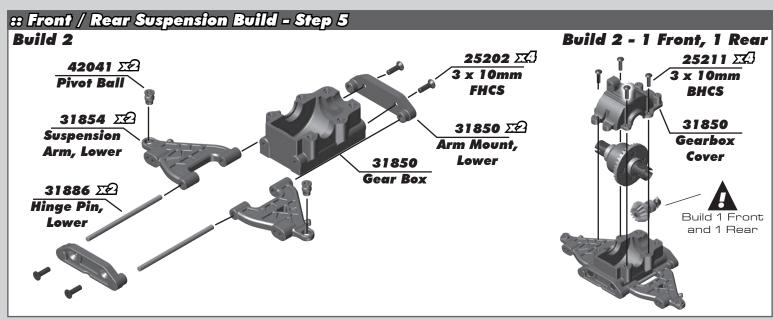


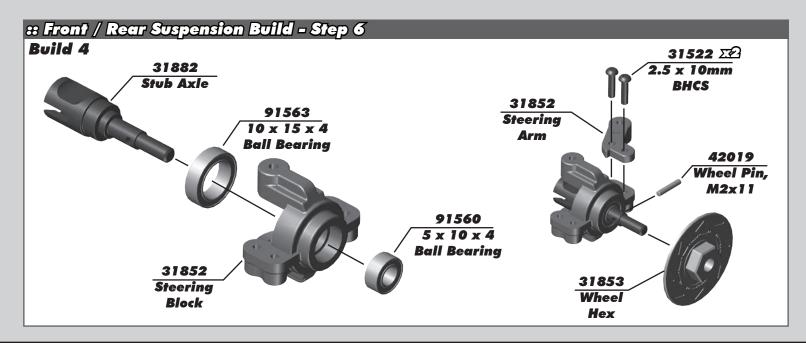


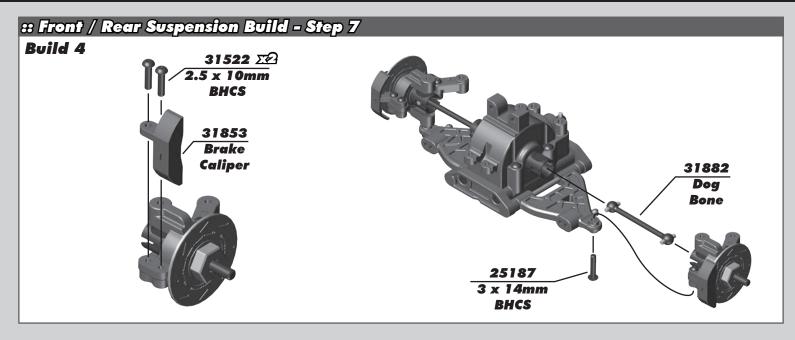


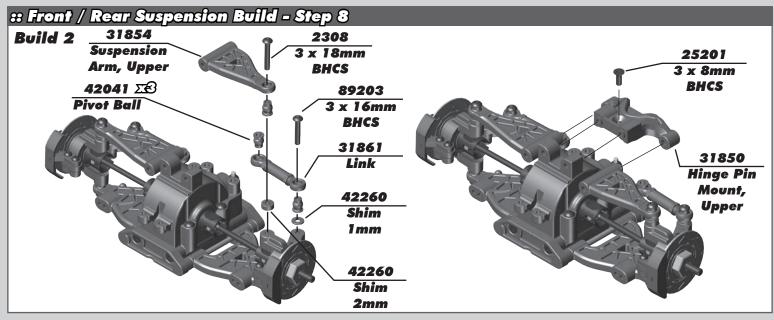


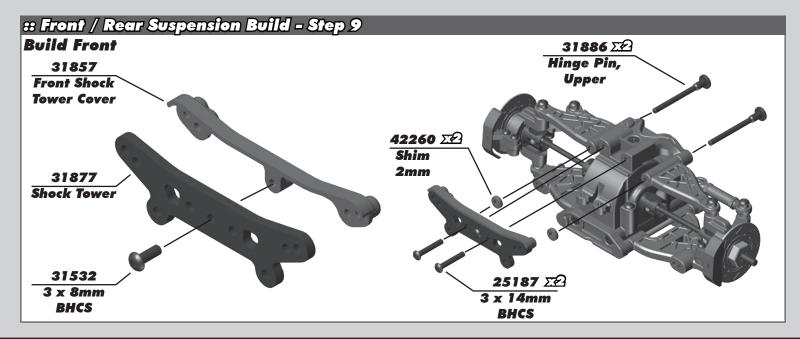


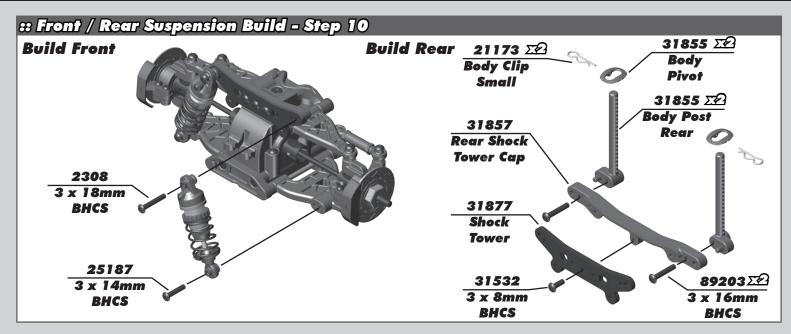


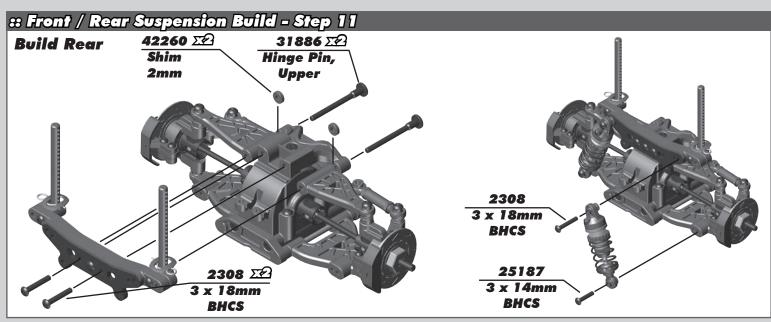


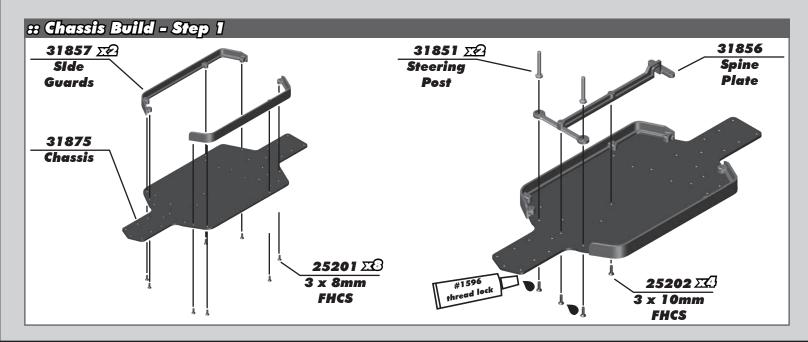


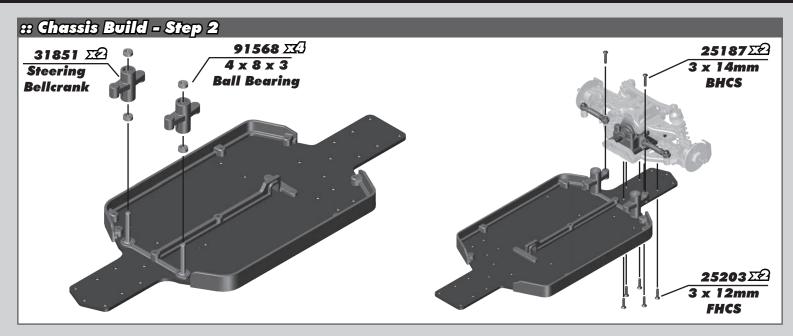


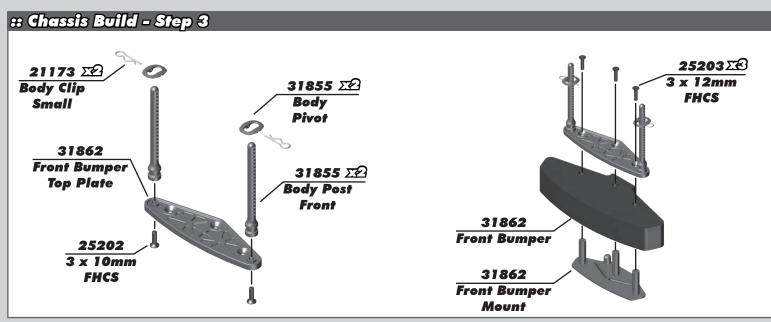


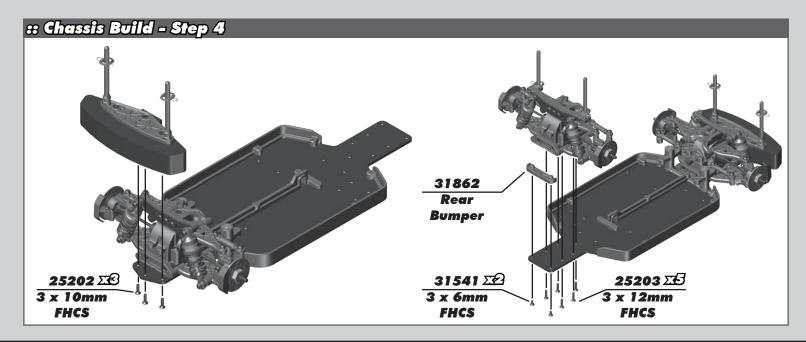


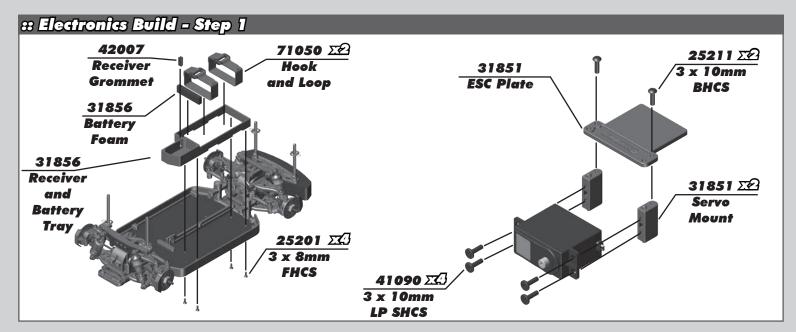


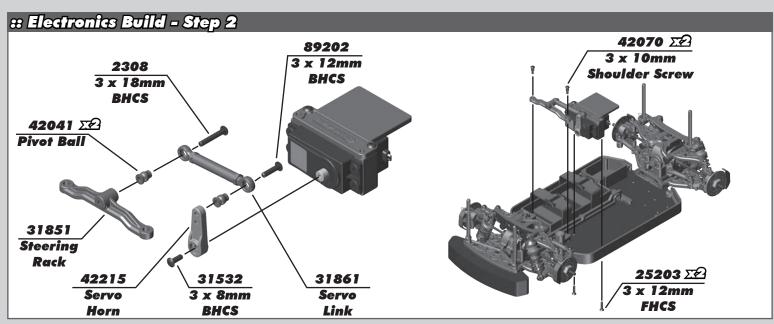


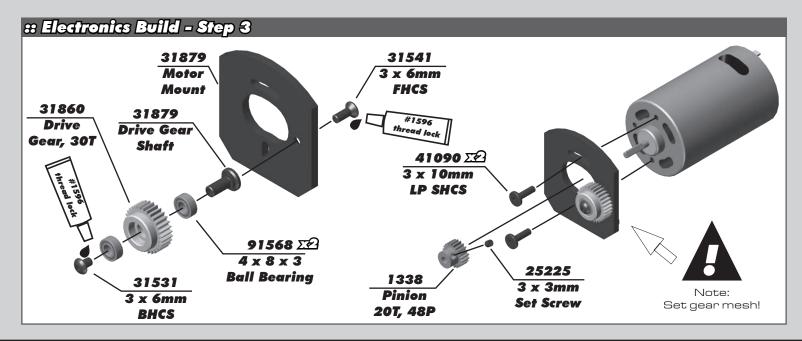


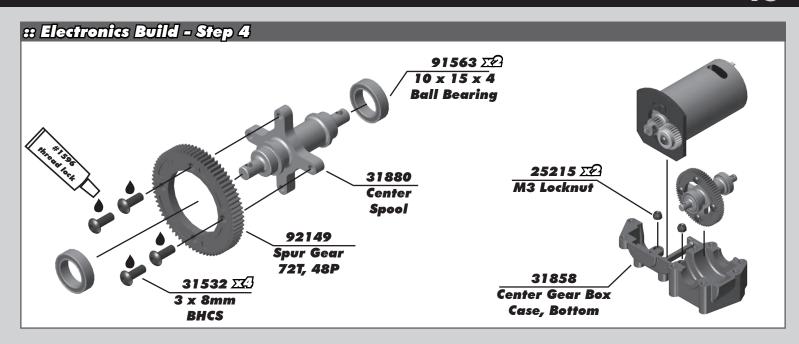


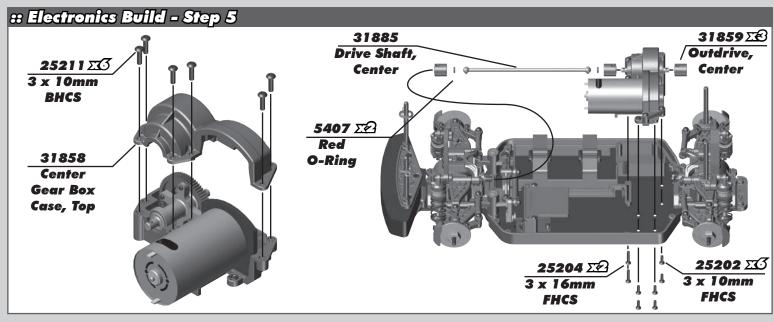


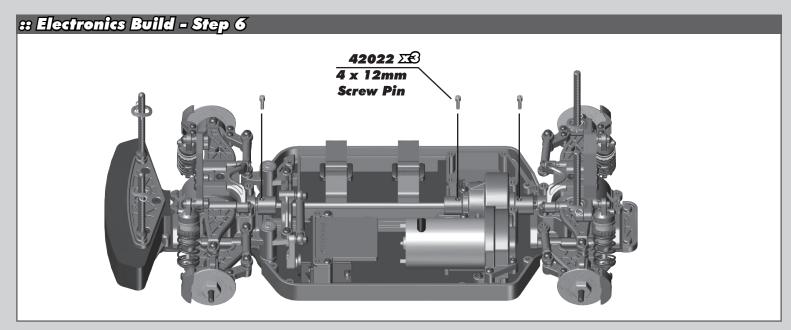


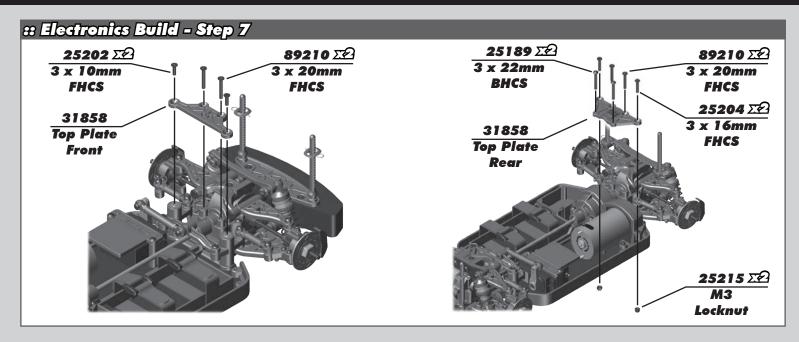


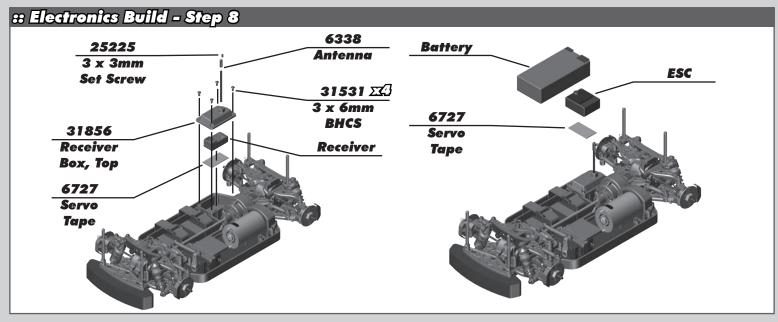


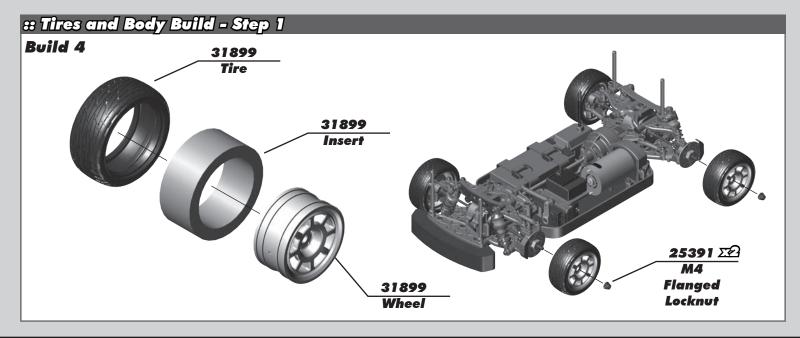


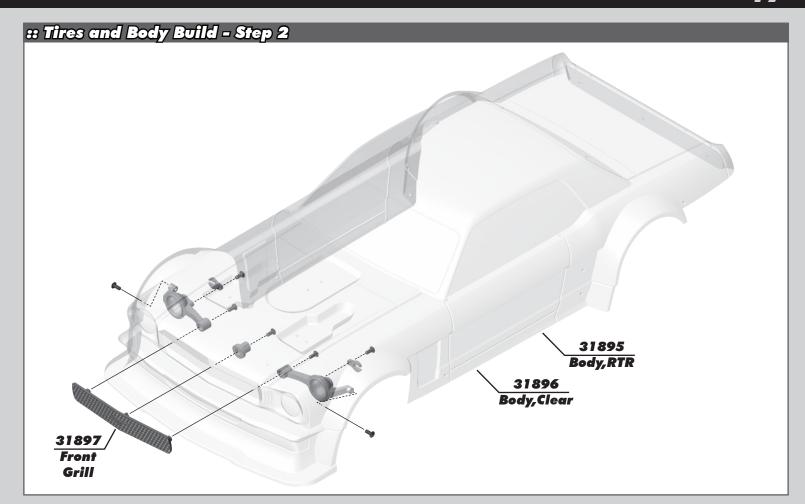


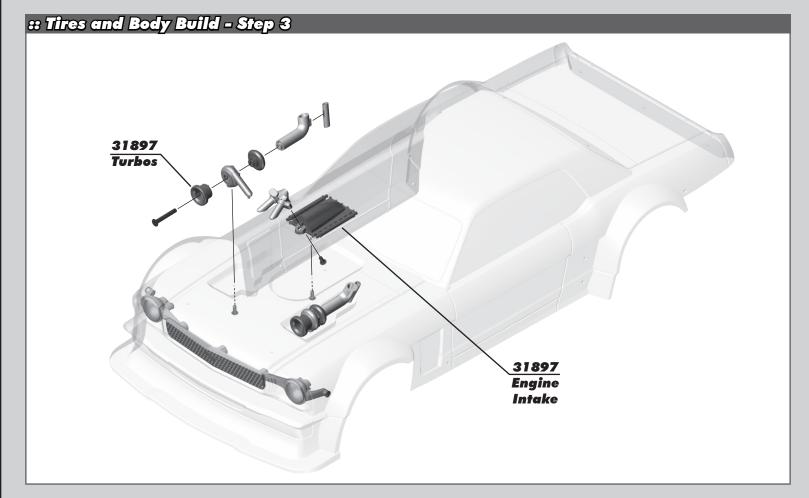

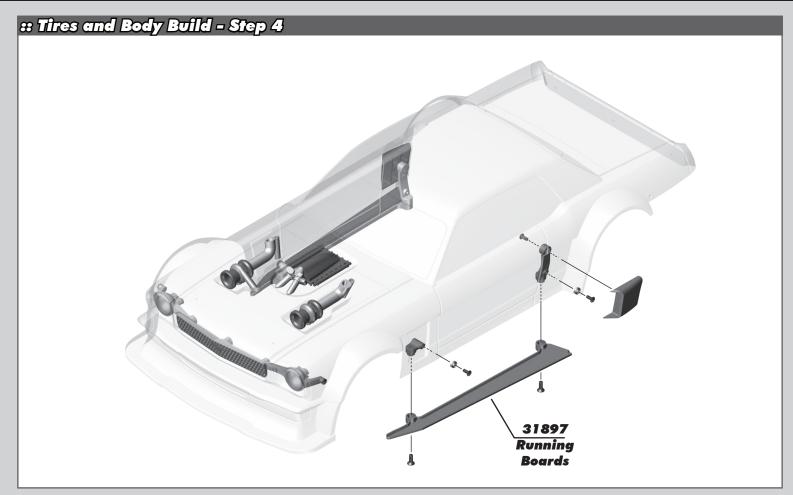

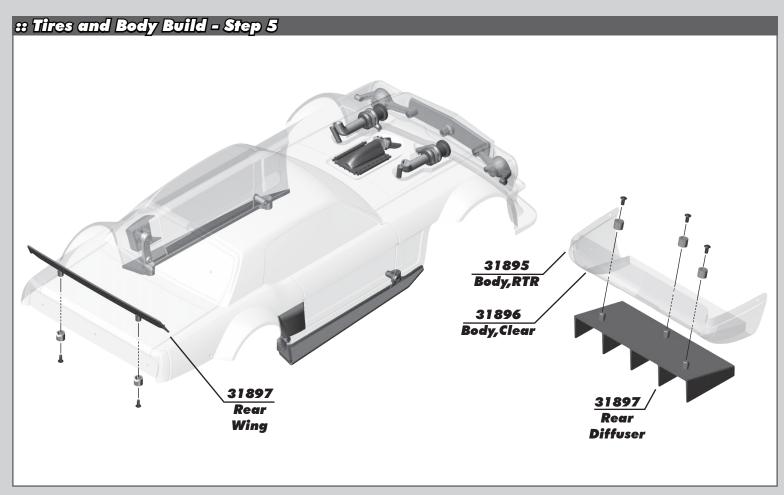

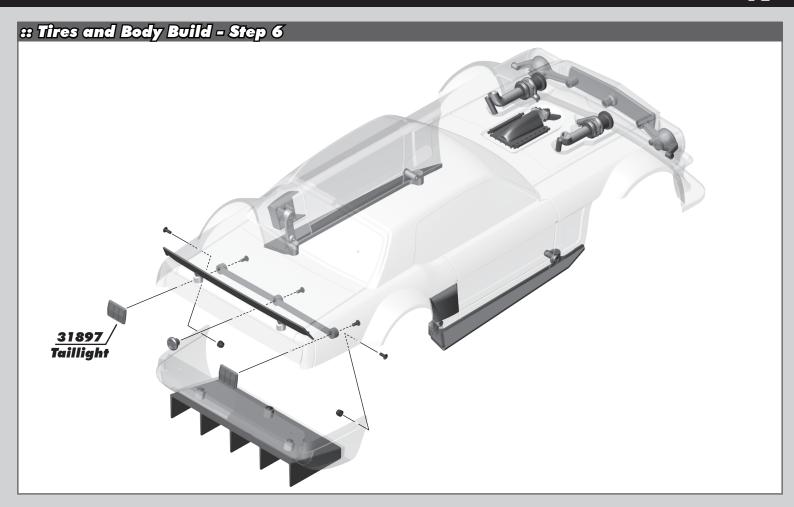

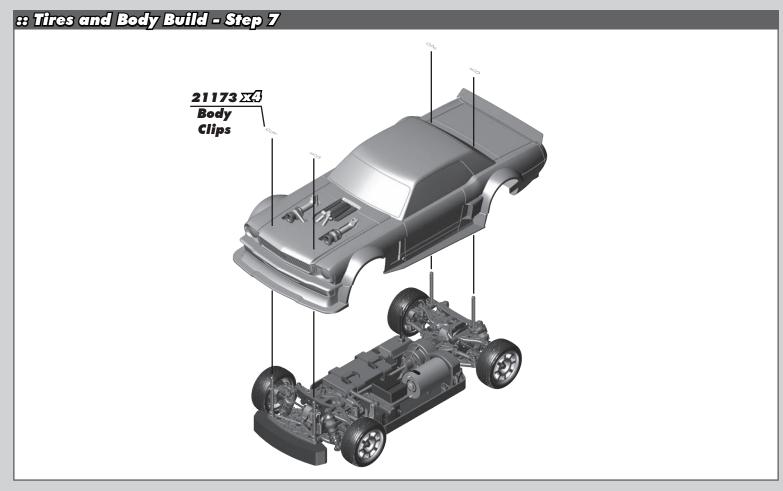

HOONIGAN





HOONIGAN (HOON'-Î-GEN) n.

A person who operates a motor vehicle in an aggressive and unorthodox manner, consisting of, but not limited to, drifting, burnouts, doughnuts as well as acts of automotive aeronautics. One who hoons.

FIND IT ON ASSOCIATEDELECTRICS.COM

CARS & TRUCKS



Vehicle Spare Parts
GO TO:
AssociatedElectrics.com
Team Associated tab
Cars & Trucks
Scroll to your vehicle
Parts & Accessories link

& MANUALS FLACTIBOX 1000

Setups and Manuals
GO TO:
AssociatedElectrics.com
Team Associated tab
Manuals & Setups

Scroll to your vehicle

A-TEAM APPS



Tuning Guides & Tips
GO TO:
AssociatedElectrics.com
Support
A-Team Apps



Associated Electrics, Inc.
21062 Bake Parkway Lake Forest, CA 92630 USA

call: (949) 544-7500 - fax: (949) 544-7501
Check out the following web sites for all of our kits, current products, new releases, setup help, tips, and racing info!

www.AssociatedElectrics.com

FOLLOW US ON SOCIAL MEDIA



TeamAssociated ReedvPower



@TeamAssociatedRC @ReedvPower



@Team_Associated @ReedyPower